


INSTRUCTIONS

1

Antenna Assembling

1.1 Assemble the bracket using the screw and wing nut provided.
1.2 Attach the bracket to the antenna unit using the screw provided.

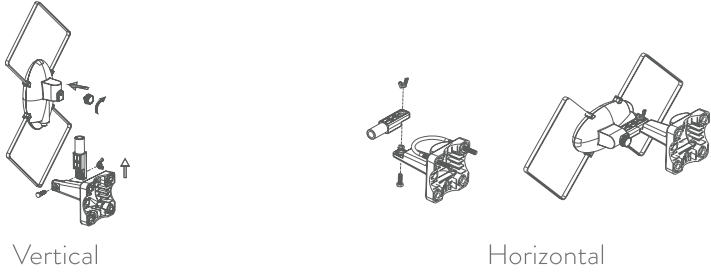

VerticalHorizontal

1

2

Installation

2.1 Mast Mounting


Install a mast (not provided) on the house, preferably on the side of the house facing the TV station transmitters. Attach the antenna to the mast using the U-bolt and two wing nuts provided.

2.2 Wall Mounting

Determine the location on the wall where the antenna is to be mounted, preferably on the side of the house facing the TV station transmitters. Attach the antenna to the house using two self-tapping screws (not provided).

2.3 Indoor Standing

Use the bracket as indoor base for table standing.

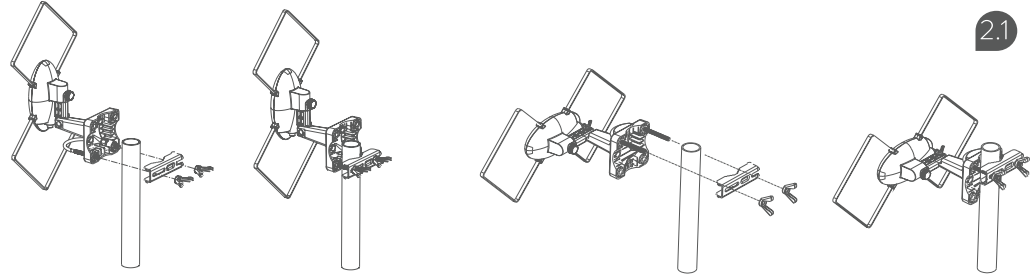


VerticalHorizontal

2

Page 2

2

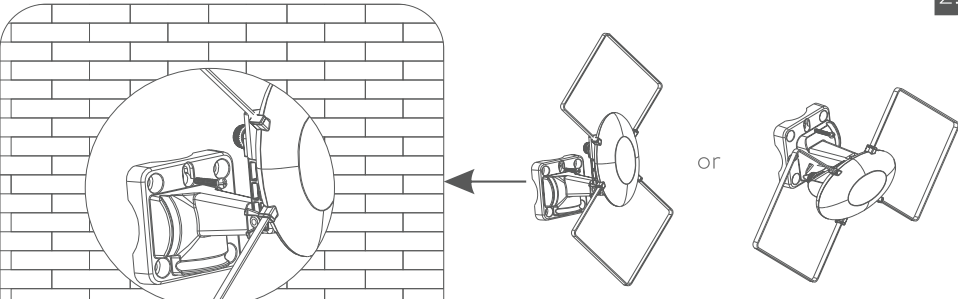

2

3

Connecting

Attach coaxial cable to connector in the antenna. Connect other end of the coaxial cable to the short coaxial cable from power inserter. Attach the long coaxial cable from power inserter to the ANTENNA / CABLE IN connector on the back of the TV or converter box. Connect the power adapter to the DC socket in power inserter. The antenna must be powered in order to function.


4

Setting and Scanning


In the TV's setup menu, set the mode to "Antenna" or "Air", then, set TV to "Scan" for channels. Consult the TV manual for detailed instructions.

Page 3


INSTRUCTIONS

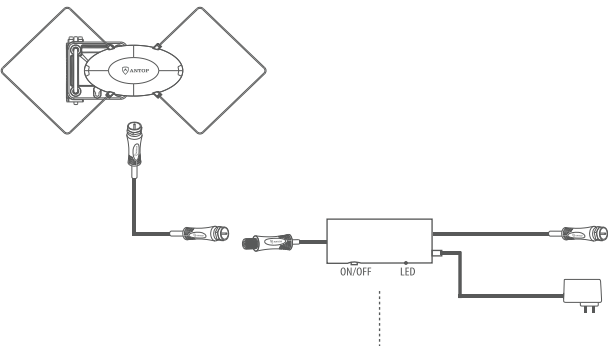


3



Back of TV



LED OFF/ON



4

The **Power Inserter** must be powered in order to function. Push the smart switch On or Off and select the switching with which more channels are received.
• Switch Off - The LED indicates yellow for normal reception.
• Switch On - The LED indicates green for stronger reception.
▲ Scan channels after each switching in the Power Inserter.

5

Adjusting Instruction

For best reception, please consider the following adjustments.

5.1 Vertical Mounting


a) Through the fixing screw A, adjust the antenna up and down until get the best reception.
b) Through the fixing screw B, rotate the antenna until get the best reception.

5.2 Horizontal Mounting

a) Through the fixing screw A, adjust the antenna's facing direction until get the best reception.
b) Through the fixing screw B, adjust the antenna up and down until get the best reception.


Page 4

5

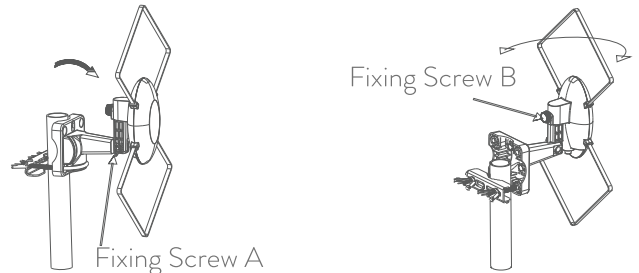

Fixing Screw AFixing Screw B

6

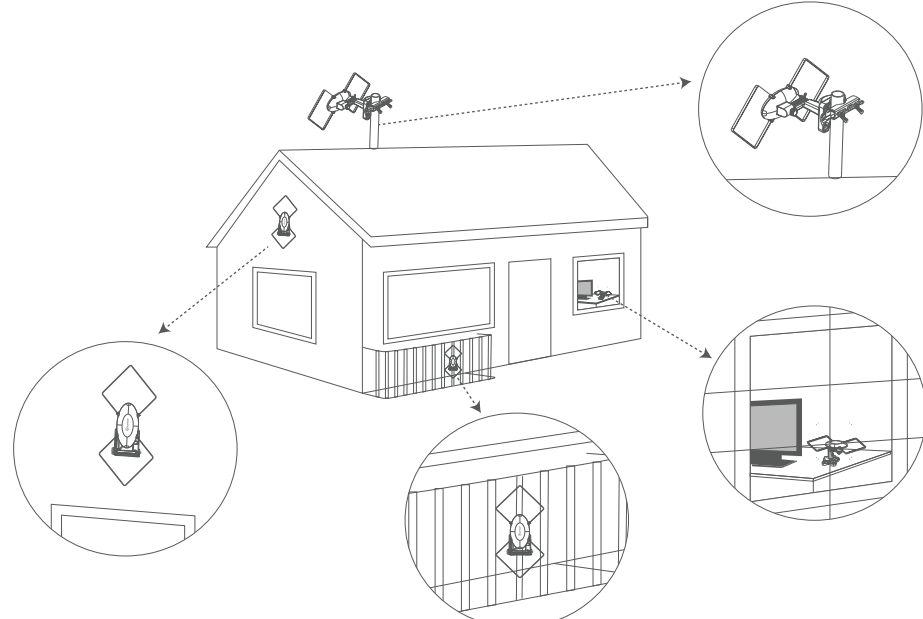

6

6

Locating

A higher location for antenna mounting towards the broadcast tower may result in better reception.

Note:

a) Keep the antenna away from sources of interference including air conditioners, power stations, etc.
b) Install the antenna as high as possible, and preferably with a clear path between the antenna and the TV station transmitters. Trees, buildings, mountains, etc., can all impact the performance of any antenna.

Back cover

WARRANTY POLICY

Customers should first contact their place of purchase to determine the reseller's warranty policy. Antop Antenna's warranty will take effect after the expiration of reseller's policy. **Antop Antenna**, warrants its products for a period of one (1) year from the original date of purchase. Warranty is valid only with proof of purchase. Warranty does not apply to defects or failures of the product caused by; neglect, misuse, negligence, accident, abuse, mishandling, misapplication, alteration, modification, power outage, unauthorized/unreasonable use, or any uncontrollable environmental damage.

RETURNS & REFUNDS

For any return, customers should first contact their place of purchase to determine the reseller's return policy. A Return Material Authorization (RMA) number must be obtained in advance by contacting Antop Antenna customer service via e-mail or telephone. Merchandise returned to Antop Antenna must have a RMA number displayed on the box and a copy of your proof of purchase inside the package. Absolutely no refund after 30 days of purchase from Antop Antenna. A restocking fee of 15% will be deducted from any refund, ask representative for further details. Refund policy for US & Canada customers only.

EXCHANGE & REPLACEMENT

For any exchange or replacement, customers should first contact their place of purchase to determine the reseller's policies. No upgrades or exchanges for different models or SKU's. One (1) Year limited manufacturer's warranty for exchange of product due to malfunction, failure or defect, missing parts or components. Exchanges will be for the same item, model and/or SKU, within one (1) year of original purchase date. A Return Material Authorization (RMA) number must be issued by Antop Antenna prior to returning any product or part. To obtain an RMA, contact Antop Antenna via email or telephone.

SHIPPING & COSTS

Customer will be responsible for shipping costs of merchandise sent to Antop Antenna. Please consult a customer service representative for details. When shipping any item to Antop Antenna, please consider using a trackable shipping method. Antop Antenna cannot be held responsible for lost or misdirected shipments. Exchanged and returned products must be sent to: Antop Antenna, RMA Department, 1650 S. Balboa Ave, Ontario, California 91761. To receive a Return Material Authorization from Antop Antenna please send your request to RMA Dept: Support@antopusa.com or to speak to Customer Service: Via telephone, M-F, 9am to 5pm (PST) 909-947-8883.


www.antopusa.com

ANTOP ANTENNA INC | Tel. 909.947.8883 | Email: Support@antopusa.com

Cover

ANTOP®

AMPLIFIED INDOOR/**Butterfly** OUTDOOR TV ANTENNA

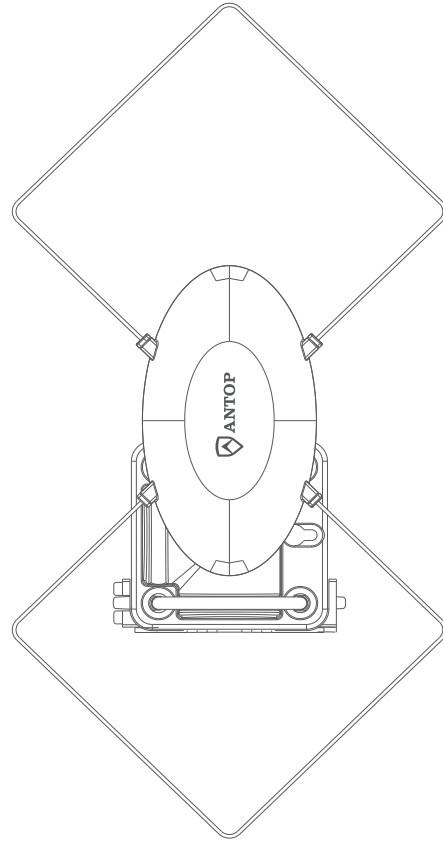

AT-408B

Diagram showing the back cover of the antenna with labels P1, P2, P3, and P4. The back cover is labeled 'Back cover' and 'Cover'.